

Cisco Digital Transport Adapter HDA-IR2 Remote Control



the LED turns off and the device code will be retained. If the device code is invalid, the LED will blink two times and then remain on. The remote will stay in set up mode. You can go back to step three to enter another code if necessary

Automatic Code Search

If the device code for your TV brand can't be found in the list, please try to search the device code following these steps:

1. Turn on TV device manually.
2. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, then release both keys.
3. Press the "TV POWER" key on your remote to enter automatic code search mode. The remote will transmit the TV power code every 1.5 seconds and the LED will blink at the same time. When you see the TV device is powered off, the remote has found a valid group device code.
4. Press the "PROG" key to store the code and to exit the search mode.

Volume Control

Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, release keys then either: 1. Press the "VOL+" key to assign the VOL+, VOL-, and MUTE keys to control DTA. Default state: the VOL+, VOL-, and MUTE keys are assigned to control DTA.

Trouble Shooting

If there is no response when you press any key on the remote, please check the following items before calling for service.

Check the Batteries

Are the batteries inserted correctly? Are the batteries drained? You may need to replace the batteries with new ones.

Check the DTA

Is the DTA connected to the input of the TV? Is the DTA connected to the cable wall outlet? Is the DTA power cord connected to the power outlet?


Check the TV

Is the TV power cord connected to the power outlet? Is the TV tuned to the correct channel to work with the DTA?

Check the TV Code List

Is your TV's brand included in the code list? Sometimes there is more than one code for a TV's brand, please try to use different codes.

If you can't find your TV's brand in the list or you can't program your remote manually, you should perform the following steps:
-Run Auto Search Mode.
-Use the original remote control that is provided with the TV.

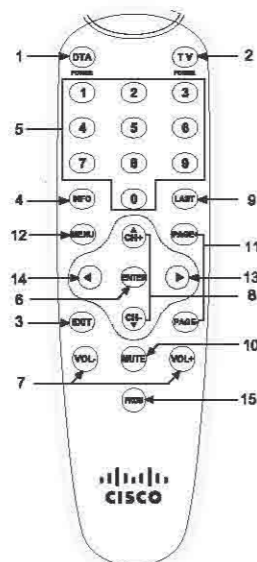

The Keys Including:

1. DTA Power
2. TV Power
3. Exit
4. Info
- 5-9 Digits
6. Enter
7. Volume +/-
8. Channel +/-
9. Last
10. Mute
11. Page +/-
12. Menu
13. Right Arrow
14. Left Arrow
15. PROG

TV Brand and Code List

888	0471 0701
A. R. Systems	0061 0601 2881
Accent	0021 0061 2881
Acer	2961 3281
Acoustic arch	2911
Acura	0021
Adcom	1061
Addison	1181 0201
ADL	2181
Admiral	0171 0231 1191
Advent	0821 0471
Adyson	1901
AEG	0081 2051
AEB	0061 2881
AGF	2501 1031 1951
Agashi	2051 0471 0081
AGB	1611
Aiko	0021 0061 2881
	2051 0641 0041
	0711 0121 0311
	0291 0471 0081
Alm	0061 0121 0701
	2881 1521 0341
	1651 1701 1301
Airis	9221
Aiwa	0981 2341 2581
	2401 0021 0311
	0341 2881 0061
	0641 2741 2431
	0711 1481
	0291 0041 0351
	1241 2641 0121
	1521 0231 0701
	1421 1351 1611
	1341 0991 0911
	0791 3121 0081
	1091 2051 0471
	0281 0651 1031
	2001 2581 0761
	1151 2421 2271
	2601
Akashi	2151 0021
Akiba	0351 0481 0751
	0061 2881
Akira	0061 2881
Akio	0061 0351 0471
Akura	2881 1271 0701
	0021 0481 1351
	2621
	2051
	0021 0061 2001
	2881 0051 1351
	0351 0821 1371
	0641 1271 0621
	2051 0431 0231
	0811 2581 0731
	2601
Alaron	0021 0061 2001
Alba	2881 0051 1351
	0351 0821 1371
	0641 1271 0621
	2051 0431 0231
	0811 2581 0731
	2601

Alfide	1241	Blue Sky	0061 0351 2881
Alkow	0041		1271 1351 2001
All-Tel	1881		0811 1341 2411
Allorgem	0081		0481 0751 2581
Allstar	0061 2881		0541 1181 0571
Ambassador	0271		2001
Amplivision	0081 1371 0531	Blue Star	0481
Amstrad	0021 0271 0061	Boadstec	0431
	1611 0471 0671	Boots	0081 0021
	0641 0351 0701	Booth	0531 0401
	0711 2881 2001	BPL	0061 0481 3111
	1151 2621		2881 2721 2841
Anam	0061 2881 0021		0341 2551 2811
	1161 1871		2691 2791 3131
Anam National	0061 2881 1161		3391 3251 3101
Anderson	1951 2041	Brandt	0211 1061 0441
Anglo	0021 0471		0491 2651 0961
Anitech	0021 0471 0061	Brandt Electrique	0491 0441
	2881 0481 0191	Briukmann	0061 2881 1271
Ansonic	1371 0061 2881		2661 0821 1221
	0021 1271 0661	Briovvega	0061 0671 2881
	0231 0191 0891	Briannia	2051 0081
	0461 0431 2381	Brother	0471
	1621	Brus	1221
AOC	0021 0101 0171	BSR	0231 0311
	0201 0281	BTC	0351
Aolingpike	0471 0701	Buah	0021 1001 0051
Apollo	0761		2001 0061 1201
Arc on Ciel	0211		3231 0351 1351
Arcam	2051 0081		0481 1271 0621
Arden	1221 1351 0061		0231 0641 0661
	1101 2881		2661 1301 1191
Aristons	2881 0061		0471 0311 0811
Arthur Martin	0231		0341 0081 2501
ASA	1621 0181 0581		2881 2521 2581
	0111		1591 2421 2271
Asambal	2721		2341 3401
Asberg	0061 2881 0191	Caishong	0021
Asora	0021	Calahi	1971
Astra	0061 2881	Canzon	0351
Asuka	0351 0081 2051	Capsonic	0471
	0471 0481	Carad	1011 0061 2881
ATD	1301		1271 2001
Atlantic	0061 2881 2051	DEC	1661 2151 1971
	0531 0461	Decca	0061 0121 1611
Atori	0021		2881 0081 1891
Auchan	0231	Carena	0751 0061 2881
Audiosonic	0021 0061 0661	Carrefour	0051 0111 0061
	1721 0211 2881		2881
	1351 1341 0081	Carvee	0261
	1371 0561 0471	Cascade	0021 0061 2881
	0351 1221 2191	Casio	0061 2881 0231
	0081 1221 1371	Cathay	0061 2881
	0471	CCB	0061 0081 2881
Audiotion	0471		2641
Audioworld	1901	CR	2721
Aunmak	0101	Celentia	1711 1721 1741
Aurovox	0081 0431		2681
AVP	2581	Centrex	1631 1971
AWA	0021 0031 0051	Centrum	2001
	0661 0701 0061	Centurion	0061 2881
	2881 2051 1031	Century	0431
	0081	CGE	0141 0251 0431
	0201 0471 3021		0821 1371 0231
Axxent	0021	Changcheng	0001 0021 0471
Axxon	1351		0661 0701 1211
B&D	2181	Changfei	0021 2641 0661
Baier	1901	Changfeng	0471 0701 1521
Baibe	0021 0471 0701	Changhai	0021 2641
Baile	0001 0021 0661	Changhong	2681 1721 0021
	1211		0471 0871 1741
Baird	0211 2651 0301	Chengdu	0021
	0121 0131 0081	Ching Tai	0021
	0341 2091	Chun Yun	0021
Bang & Olufsen	0951	Chunfeng	0021 0471
BaoHuaShi	0471 0701	Chung Hsin	0201 0051
Baozheng	0021	ChungFeng	0701
Barco	0231	Chunman	0021
Basic Line	0021 0661 0061	Cimline	0021 0351
	0351 0231 1271	Cinema	1241
	2881 0481 0081	Cinex	1151 2501
	0751 0571 2001	Citizen	0101
Bastide	0081	City	0021
Bauer	1701 0021	Clarivox	0061 0821 2881
Baur	0021 0061 0311		0111 0191
	0791 0881 0011	Clatronic	0061 0431 1371
	2881 0291 2401		0641 1351 0351
	0081		0601 0691 0231
	0281		0021 0191 0531
	0001 0021 0341		1151 1031 1951
	0371 0471 0661	Clayton	2001
	0701 0801 1211	CMS	2051
	1741	CMS hightec	0081
		Cobolt	1971
		Combitech	2581
		Concorde	0021
		Condor	0531 0061 1371
			2881 2051 0021
			0481 0191 0431
			0821 0891 0231
			0471
			1531 1741 2711
		Comis	1721
			1821
		Comnc	0061 2881
		Comrad	0021 0471 0701
		Comrowa	1301 1521 2051
			0021 2051 0051
		Comtec	0891 1011 0081
			0091 0471 0061
			2881
			0211 0491 0811
		Continental Edison	0021 0561 0061
		Cosmel	2881
			0141 0431 0251
			0231
			0751 0261 0051

1371 1221 2881		Crown Mstang	0061 2051 0911
0821 0811 1351		CS Electronics	2881 0181 1621
1031 1241 1341		CTC	0311 0231 0021
0541 1181 0571		CTX	0351 0061 0531 2881
2001		Curtis Mathas	2881
1241		Cybertron	0191
2051 0351 0431		Cytronix	0021 0471 2051
0431		D-Vision	0431
2511		Daewoo	0271 0281 1351
0101 0171 0241			0101 0061 2881
0351			0641 0111 0481
2321			0531 0311 2411
0061 2621 2881			0961 0491 0211
1111 1211 0661			0441 1061
2411 0861 0061			0231
2881 0021 2051			0061 0231 0311
0551 0081 1891			0121 0081 1611
2581 1931 0201			2881
2931 3361 1901			0021 0431 1191
1881 1241			0231 0661
0551 2051			0211 0491
0471 0081			0871 1521 1741
0061 2881 0471			2031 2121 1631
0061			2881 3121
0471 0081			0231 0351 0061
0061			0971 0051 0071
0041 2051 0021			0201 0761 0231
0061 2881			2651 0081 0211
0061 1611 0191			0321 0281 1611
0231 0081 2881			0121 0781 0861
0431 2051			0061 0871 2881
2271 2421			0911 1191 1381
0061 2881			1271
0461 0231			2051
0061 2881 0431			1891 2031 0181
0061 2881			0561
2071			0001 0061 0021
0061 2881			0281 1371 0651
0021			0081 0431 2881
0021			2051 0231 0311
0471 0701			0211 1191 1031
0021			0071 1351 1341
0661 0021			0751
1061 0491 0441			0811
2651 0961 0301			1111 2421 0051
2881 0041 1181			2001 2271 0061
1621 0201 0311			0121 0861 0081
0911 0731 2001			2881 1351 2651
3211 2341 2581			1271 0641 2411
0231 2051 0791			0661 0471 1611
0311 1191 0061			0021 0811 0041
2881 0641 0701			0771 0961 0441
0301 0471 2581			0351 2581 2251
0081			1211 2521 1931
0341 0581 0911			2191 1281 3021
0311 0231 1191			
0121 0491 2651			
0091			
0061 0181 0111			
1621 0121 2881			
1351 0581 0891			
1611 0081 0231			
1341 0191 1091			
0841 0771 2501			
0761 0821 1031			
1051 1821			
0021			
0021 0061 2051			
2881 0081 0661			
0431 1271 0541			
1351 0231 2411			
1281 1881			
0191 0891 0121			
0341 0311 2001			
2071 1821 2971			
1951 2991			
1621 0081 0051			
0341 1371 0941			
0091 0311 0231			
0121 0121			
2701			
0061 0751 2881			
1011 0121 0351			
0471			
0191			
2831			
2041			
0301			
0061 0231 0531			
2881 1221 2051			
2051 0531			
01			

Lavis	2001 0061 0231	Mexim	2621 2501	Nesco	0431 2581	Panasonic	0001 0061 0101	0311 0701 0211	1371 0571 0121	Sonnclair	0061 2881	Telecor	0061 2881 0231	0881 0311 0431
Leader	0021	MCE	0021	Netcat	0061 2881		0201 0231 0281	0881 0791 0291	2051 1621 0081	Somoko	0021 0061 2881		0351 0081 0461	0841 0771 0551
Leaton	0061 2881	ME	2721	Network	0561		0051 0081 0431	0051 0081 0431	0941 0701 0021		0471 0481 0081	Telefunken	1061 0141 0961	0821 0031 0791
Legend	0021 0561	Mediator	0061 2881	Neufunk	0061 0021 2881		0311 0341 0371	0401 0251 0331	0871 0231 0061	Somolor	0231 0341 2401		1061 0141 0961	0051 0111 0231
Lemair	0891	Medion	0061 1271 1351		1011 0351 0481		0631 0871 0911	0181 1271 2881	0201 2881 1221		0911 0311 0481		0211 1281 0441	2881 0891 0401
Lenco	0061 1391 0021		2001 1821 2661	New Tech	0061 0021 2881		2881 1161 1611	0011 0551 0471	0261 1321	Sontec	0061 2881 1371		1301 2651 1331	0331 2401 1271
	0231 0661 2881		2451 0081		2651 0081		1841 1861 2361	2001 0581 0021	0021 0171		0021		0851 1721 2551	0081 0211 0671
	1621 1281 2001		2881 0791 1891	New World	0351		2461 2551 0501	0061 0891 2881	0061 2881	Sony	0031 0051 0061		1531 3071 1631	0561 0271 1091
Lenoir	0021		1301 2581 2381		0021 1391 0281	Panavision	0061 0891 2881	0211 0351 0231	2581	Seville	0141 0171 0191		0491 1971 0251	0021 0251 2001
Lea	0431		2521 2271 2421	Newwave	0171	Panda	0021 0341 0371	0061 2881 0231	0061 2881 0301	SBR	0261 0611 2881		0131 0061 2881	2381 0261 1951
Levis Austria	0061 2881	Megas	1991 2311 2341		1011		0471 0701 0871	0061 2881 0491	1031 1221 0661	Schaub Lorenz	1161 1791 1981		1221 1351 2501	2041 1041
Lenzor	2091	Megatron	1011	Nifen	1681		1301 1741	0561	2071		2331 2401 2471	Univox	0581 1741	0061 2881 0561 0231
Leyco	0061 0471 0121	MHI	0281	Nicomagic	2051	Papourw	0061 2881	0061 2881 0081	0061 1891 0351	Sound & Vision	3381 3701 3621	Telefusion	0061 0231 0461	2491 0281 1951
	2881	Mile	2001 0061 2881	Nikkei	0121 0041 0351	Pathe Cinema	0231 2051 0531	1611 0431 0061	0191 0351 0661		0061 2881	Telegazi	0351 0471 2881	3021 2181
LG	0001 0021 0061	Meletronic	0471 0701		0061 2881 2051		0081 0471 0561	2881	2661 1271 0691		0281	Telemeister	0531 0061 2881	0061 0231 0081
	0081 0101 0201		0021 0581 0061		0021 0051		0081 0471 0561	0061 2881 0281	0601 0461 2651	Soundesign	0061 0821 2881	Telematic	0021 0061 2881	2881 1271 2001 1951
	0211 0231 0281		0791 1621 0211		0081 0471 0561		0021 0051	0021 0061 2881	0081 0311 2001	Soundwave	0531 1341	Teletar	0021 0061 2881	0701
	0311 0431 0651		2651 0231 0431		0021 0051		0021 0051	0021 0061 2881	0231 1151 1351	Sows	0101 0371 0051	Teletch	0021 0061 2881	0021 0061 2881
	2881 1031 1131		0181 0081 0491		0021 0051		1151 1271 0471	0021 0061 2881	2411 2581 2621		0281	Teleton	0021 0061 2881	0021 0061 2881
	1301 1341 1351		0661 0771 0841		0021 0051		2001	0021 0061 2881	2341 0111	Soyca	1581	Teleton	0051 0081 0231	0051 0081 0231
	1371 1761 1851		2051 0891 2881		0021 0051		0111	0021 0061 2881	0281	Spectra	0021	Televideo	0461 1191	0051 0081 0231
	2051 2071 2261		2801 2851 2921		0021 0051		0061 2051 0481	0021 0061 2881	0281	Smugyoung	0021	Television	0531 0231 2051	0051 0081 0231
	3081 3471 3501		0011 1211 1351 3401		0021 0051		2881	0021 0061 2881	0281	Stankosonic	0021	Telmax	0061 2881	0061 2881
	3531 3591		3401		0021 0051		0061 2881	0021 0061 2881	1111	Standard	0021 0061 0081	Tempest	0021 0061 2881	2051 0081 0531 0061
Liesenk & Tier	0061 0401 2881	Memorex	0021 0281 2001		0021 0051		0311 0231 0761	0021 0061 2881	1111	Starlite	0021 0231 0061	Tenasee	0061 2881	0061 2881
Liesenkottler	0061 0401 0331		1161 0101		0021 0051		0771 0911 1031	0021 0061 2881	1111	Stem	0021 0231 0061	Tenax	1621 0351 0531	0061 2881 0081
	2881	Memphis	0561 0121 0021		0021 0051		0841 1091 0571	0021 0061 2881	1041 2651 1251	Stewart	0021 0181 0661	Televideo	0021 0181 0661	0021 0181 0661
Lifotec	0061 0021 2661		0341 0661 0581		0021 0051		0531 1011 0211	0021 0061 2881	1521	Strat	0481 0351	Telexa	0641 0651 0431	0021 0181 0661
	0661 1271 0791	Mercury	0001 0061 0021		0021 0051		0281	0021 0061 2881	2661 0781	Strat	0471 0891 0721	Tempst	1341 0231 2001	0021 0181 0661
	1171 2001 1891		0301 0471 2881		0021 0051		0081	0021 0061 2881	0281	Strong	0021 0061 2881	Tenax	0531 0201	0021 0181 0661
	2881 0351 0471	Merritt	0911 0311 0231		0021 0051		0081	0021 0061 2881	0281	Strato	0021	Tenax	0641 0651 0431	1901
	1261 2271 2421	Metz	1061		0021 0051		0081	0021 0061 2881	0281	Strato	0021	Tevison	1341 0231 2001	2491 2941
	1351		0681 0881 0741		0021 0051		0081	0021 0061 2881	0281	Strong	1951 2041 2001	Tevison	0531 0201	0561
Lloyd's	0001 0021		1511 0631 1951		0021 0051		0081	0021 0061 2881	0281	Stylandia	0061 2881 2701	Tevison	0661 2881 0081	0061 0531 0471
Local Calcutta TV	3171 2831 2841		0011 0291 0061		0021 0051		0081	0021 0061 2881	0281	Sunic Line	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	2721		2881 1281 1271		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Local Chennai TV	0641 3171 0471		2001 3321		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0991 3261 2831	MGA	0281 0061 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	3051 3091 0021		3041		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Local Delhi TV	2741 3231 3171	Micromaxx	0061 2881 1271		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	3261 2831		2001 2251 1821		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	2001 2041	Microstar	1821		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0791 1101 1641	MicroTEK	1721		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0061 2881 1171	Mikomi	2041		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1371 0671 1611	Mimato	0061 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Logik	0001 0031 0101	Minerva	0111 0811 0881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1301 1581 0021		0471 0121 0021		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0301 0471 0641	Minoka	0011 0291 1611		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1931 2181 2001	Mirror	0201		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1271 2661	Mistral Electronics	0701 0061 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Longjiang	0471 0701		2521		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Luker	2621		0301 0881 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
Luma	0061 1191 0231		0301 0881 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0891 2881 0661		0301 0881 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0021 0671 0461	Mitsuri General	0341 2001 2371		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1191 0061 2881	Mivar	0231		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0671 0231 0461		2051 1611 1371		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0311 0081 0471	Monaco	1141 0081		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0131	Morgan's	0021		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0061 0021 2881	Motorola	0061 2881		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0321 1951 0311	MTC	0171		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	1191 0771 0841		0101 1371 0791		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0341 0911 0231	MTIlog	0101 1371 0791		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0581 0761 2001	Mudan	0231 2051 0311		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0081 1091		0021 0341 0371		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
LXI	0281	Multibroadcast	0471 0701		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0061 2881	Multistandard	0081 1091		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0191 0431 1611	Multitec	0061 2881 1221		0021 0051		0081	0021 0061 2881	0281	Sunkai	0061 2881	Tevison	0061 2881 0081	0061 0531 0471
	0231		1271 2001 2501		0021 0051		0081	0021 0061						