

GVTC DTA Remote Quick Reference Guide

Remote Control Functions

- 1 DTA POWER
- 2 TV POWER
- 3 0 - 9 DIGITS
- 4 INFO
- 5 LAST
- 6 MENU
- 7 PAGE +/-
- 8 LEFT/RIGHT ARROWS
- 9 ENTER
- 10 EXIT
- 11 CHANNEL +/-
- 12 VOLUME +/-
- 13 MUTE
- 14 PROG



Batteries

Use two AAA batteries. Check the diagram inside the battery compartment to ensure the batteries are inserted in the correct direction.

NOTE: Batteries must be installed within two minutes of removal to retain programmed TV Code.

For more information, please refer to the Programming Guide included with your remote, or [click here](#).

IMPORTANT NOTE: You may need to keep your original TV remote to perform advanced functions and to adjust picture and/or audio settings.