## **GVTC Arris Remote Quick Reference Guide**

- 1. **DVR** Goes to the Recorded TV category.
- **2. VOD** Goes to the GVTC Video On Demand category.
- **3. GRID** Activates the traditional Grid Guide view of TV programming.
- **4. LIVE TV** Goes to full-screen, live TV, regardless of what's currently in focus.



- 1. **ARROWS** Moves the horizontal or vertical bands one card backward or forward one item. Holding them down activates Turbo Mode and increases your browsing speed.
- 2. OK Begins playing the item in focus or executes an option in an action menu.
- **3. BACK** Takes a vertical list displaying TV programming back to the previous half hour. Also pages back through an info note.
- **4. NEXT** Takes a vertical list displaying TV programming forward to the next half hour. Also pages forward through an info note.
- **5. INFO** Brings up an action menu of options related to the item in focus.



- NUMBER KEYS Entering numbers will take you directly to the corresponding channel. The CLEAR will back you out of any menu you are in.
- **8. TV INPUT -** Allows you to change inputs on TV.
- **1. MENU** From wherever you are, MENU returns you one step at a time toward the top level of the main menu.
- **2. PLAY** Begins playing the TV show or media file in focus. Also allows you to view the show at the point of fast-forwarding or rewinding.
- **3. SKIP** Skips forward in your program the number of seconds that you predefine in settings.
- **4. REPLAY** Rewinds the program seven seconds, so you can check out what you missed.
- **5. REWIND** Press up to three times (for three speeds) to rewind the show.
- **6. FAST-FORWARD** Press up to three times (for three speeds) to fast-forward.
- 7. **RECORD** Press RECORD while watching a show or with a show in focus to record.
- **8. STOP** Exits out of a recorded show or stops a recording in progress if you're watching that show full screen.
- **9. PAUSE** Pauses the show you are watching.





